
K55-100(SQ)/101(SQ)/102(SQ)/103(SQ)

Kitchen/Prep Pull-Down Faucet Installation Instructions

CALIFORNIA FAUCETS RECOMMENDS THAT ALL PLUMBING PRODUCTS BE INSTALLED BY A LICENSED PROFESSIONAL

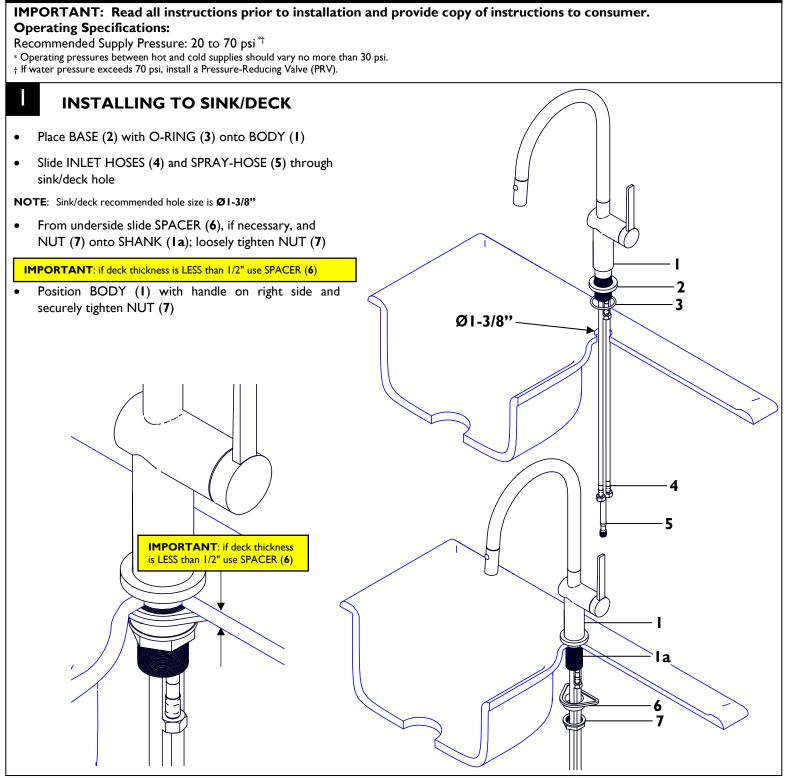


California Faucets

WATER CONNECTIONS

IMPORTANT: Water supplies MUST be flushed before running water through SPRAYHEAD (8); the following procedure will ensure debris removal

- Tighten red colored nut on HOT INLET HOSE (4a) to HOT SUPPLY (9a)
- Tighten blue colored nut on COLD INLET HOSE (4b)
 to COLD SUPPLY (9b)
- Ensure that faucet HANDLE (10) is in closed position as shown (straight up)
- Turn on **HOT** and **COLD** SUPPLY VALVES (9)
- Place BUCKET (11) (not supplied) under MIX HOSE (12)
- Slowly open HANDLE (10) on faucet and cycle through cold and hot water until water runs clear

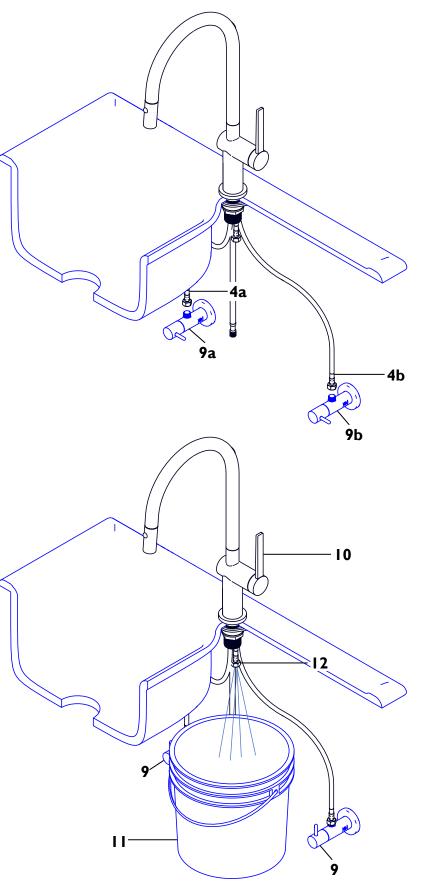

FINAL CONNECTIONS

- Tighten CHECK ASSEMBLY (13) onto end of MIX HOSE (12)
- Attach SPRAY-HOSE (5) onto end of CHECK . ASSEMBLY (13)

CHECK ASSEMBLY MAINTENANCE

- Disconnect CHECK ASSEMBLY (13) from 0 SPRAY-HOSE and MIX HOSE (12)
- Unscrew UPPER HOUSING (13a), 0 remove both CHECK VALVES (13b) by gently pushing through hole in LOWER HOUSING (13c)
- Rinse both CHECK VALVES (13b) with 0 clean water
- Assemble CHECK VALVES (13b) into 0 LOWER HOUSING (13c) using plumbers grease on orings as needed

IMPORTANT: Both CHECK VALVES (13b) must be orientated in LOWER HOUSING (13c) as shown.

- Apply thin film of plumber's grease to 0 HOUSING O-RING (13d) and tighten UPPER HOUSING (13a) onto LOWER HOUSING (13c)
- Attach CHECK ASSEMBLY (13) to MIX 0 HOSE (12)


ATTACHING WEIGHT


- Separate FEMALE WEIGHT (14a) and MALE WEIGHT (14b) sections by loosening SCREWS (14c)
- Place FEMALE WEIGHT (14a) at lowest straight point on SPRAY-HOSE (5) just above curve of hose

IMPORTANT: The placement of WEIGHT (14) shall be at the lowest portion of the SPRAY-HOSE (5).

Secure MALE WEIGHT (14b) onto SPRAY-HOSE (5) by tightening both SCREWS (14c)

IMPORTANT: The area below hose/weight must be clear of all items.

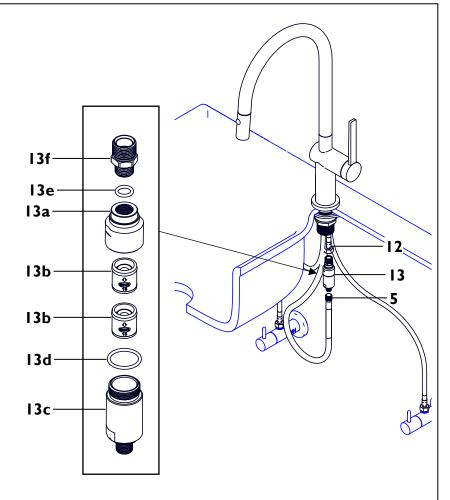

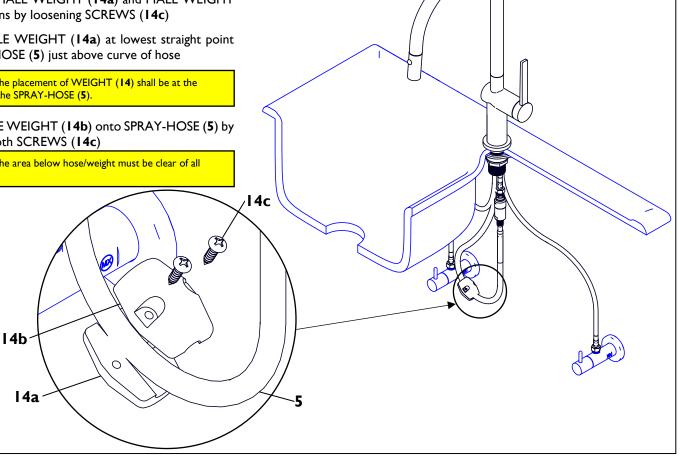

MAINTENANCE

SPRAYHEAD - BUTTON

- Place drain strainer or towel in sink drain to prevent parts from falling down the drain
- Use KEY (15) to remove retaining RING (8a) and SPRAY-FACE (8b)

IMPORTANT: Once SPRAY-FACE (**8b**) is removed **DO NOT** operate water through SPRAYHEAD (**8**) as internal damage may be done to SPRAYHEAD (**8**)

- Rinse all parts with clean water to remove debris
- Replace all parts in opposite order as described above

SPRAYHEAD - SQUEEZE

- Place drain strainer or towel in sink drain to prevent parts from falling down the drain
- Use wrench to remove decorative TIP (16a), aerator INSERT (16b) and WASHER (16c)
- Use HEX KEY (17) to remove SPRAY-FACE (16d)

IMPORTANT: Once SPRAY-FACE (**16d**) is removed **DO NOT** operate water through SPRAYHEAD (**16**) as internal damage may be done to SPRAYHEAD (**16**)

• Rinse all parts with clean water to remove debris

• Replace all parts in opposite order as described above

CARTRIDGE

- Turn off HOT and COLD supply stops
- Remove SETSCREW (10a) from HANDLE (10)
- Slide HANDLE (10) off CARTRIDGE (18)
- Remove BONNET (19), PACKING NUT (20), and slide CARTRIDGE (18) out
- Rinse CARTRIDGE (18) with clean water to remove debris
- Replace CARTRIDGE (18) and secure with PACKING NUT (20) torqued to 70-90 lb-in

IMPORTANT: Over tightening PACKING NUT (20) will cause damage to CARTRIDGE (18). Under tightening PACKING NUT (20) will cause CARTRIDGE (18) to leak.

 Replace remaining parts in opposite order as described above

