


1. PARTS

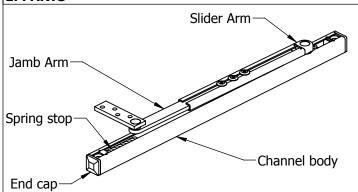


Screw Chart

	QTY	Screw type
Jamb	4	#14 x 1-1/2" FPHWS
Janib	4	1/4"-20 x 5/8" FPHMS
Door	2	1/4"-20 x 1-3/4" FPHMS
Door	2	#18 x 3" RPHWS
A rm	3	5/16"-18 x 5/16" HBHFS
Arm	1	5/32" Hex Key

Pre Installation Notes:

- 1. Hollow metal frames must be properly reinforced with 3/16" [5] thick plates that are at least 12" [305] long. 2. Hollow metal doors must be properly reinforced with 3/16" [5] as shown on page 3.
- 3. Hold open (7017) and Friction (7015) are not permitted for use on fire doors.
- 4. Stop only (7016) is subject to job specification for fire door use.

2. INSTALL OVERHEAD DOOR HOLDER/STOP (ODHS) (Right Hand Shown)

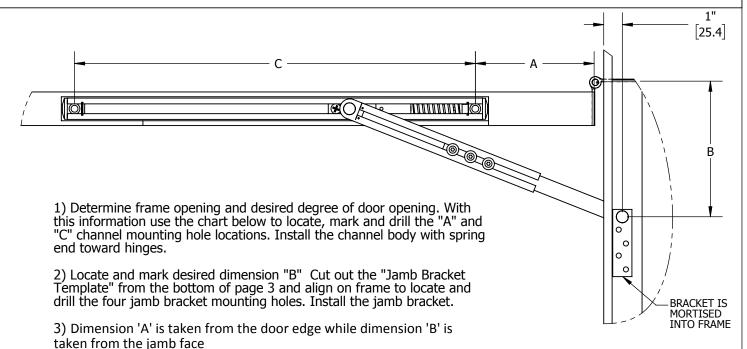

		85-95 degree	of opening	96-110 degre		
Size	Door Width	Α	В	Α	В	С
1	24"-30" [610 - 762]	1-9/16" [39.7]	7-1/16" [179.6]	1-9/16" [39.7]	7-1/16" [179.6]	20-7/8" [527]
	31"-40" [762- 1016]	6-3/16" [157.2]	7-1/10 [179.0]	5-3/16" [131.8]	7-1/10 [1/9.0]	
2	41"-45" [1041 - 1145]	11-23/32" [297.7]	11-1/16" [281.1]	9-23/23" [246.9]	10-1/16" [255.7]	26" [660.4]
	46"-55" [1145 - 1397]	16-7/32" [412]	11-1/10 [201.1]	13-23/32 [348.5]	10-1/10 [255.7]	


** All Dimensions are in Inches and Millimeters

DRAWING NO: I-CL00317	REV: 07	SHEET 1 OF 3
LIAGED COMPANIES 1883 II 1 St. 1 St. 1	(000) 00= 000	(222) -22



3. ARM ALIGNMENT


Open the door then align and insert the Jamb Arm into the Slider Arm.

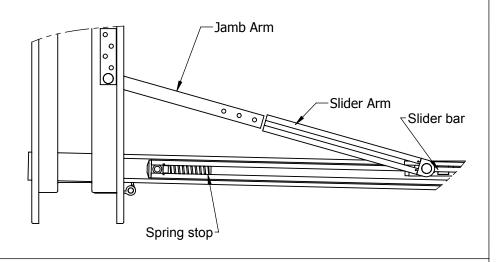


4. SETTING DESIRED DOOR OPENING


If it applies, disengage the hold open engagement switch (step 5a). With the door held at the desired maximum opening angle, position the slider bar against the stop spring. Then tighten the three friction screws. Tighten the screws to **12 ft-lbs [16.3 Nm].**

If dead stop is required, position the door 5-7 degrees less then the desired dead stop, and tighten as instructed above.

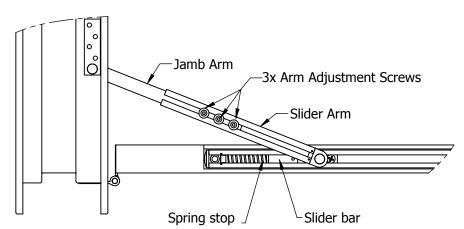


5a. OPTIONAL HOLD OPEN (7017)

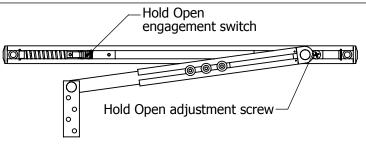

 

Using a Philips screwdriver, turn the hold open adjustment screw clockwise to increase the hold-open tension and counter-clockwise to lower the tension.

5b. OPTIONAL FRICTION HOLD OPEN (7015)

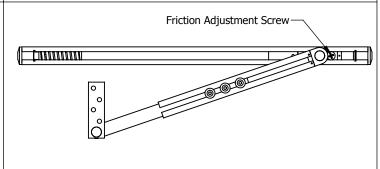

Using a flat head screw driver, turn the friction adjustment screws clockwise to increase the friction and counter-clockwise to lower the friction.

DRAWING NO: I-CL00317


REV:07

SHEET 2 OF 3


HAGER COMPANIES 139 Victor Street, St. Louis, MO 63104 - (800) 325-9995 - Fax (800) 782-0149




DOOR PREP FOR ALL STYLES OF HOLD OPENS AND STOPS

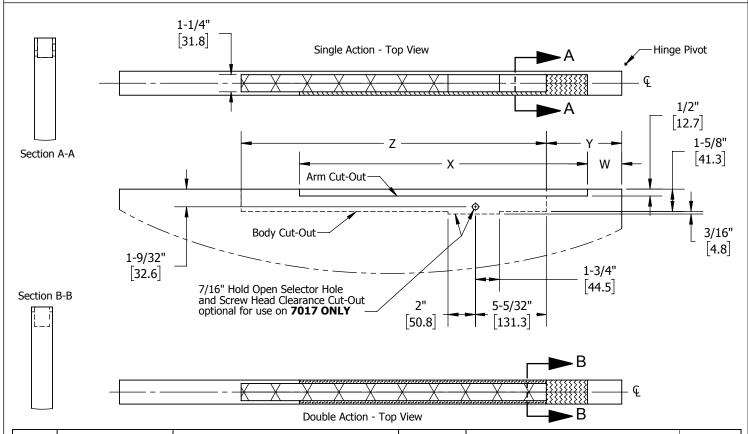

			85°-95° Opening				97 °- 110° Opening			
	Size	Door Width	Х	Z	W	Υ	Х	Z	W	Υ
	1 24" - 30" [610-762] 31" - 40" [762-1016]	10" [457.2]	22.4/4" [ECE 2]	CAME AC IVI	7/8" [22.2]	10" [457.2]	22.4/4" [ECE 2]	CAME AC IVI	7/8" [22.2]	
		31" - 40" [762-1016]	18" [457.2]	22-1/4" [565.2]	SAME AS Y	5-1/2" [140]	18" [457.2]	22-1/4" [565.2]	SAME AS 1	4-1/2" [114]
	2 F	41" - 45" [1041 - 1145]	23-1/2" [596.9]	27-3/8" [695.3]	10" [254]	11 " [279]	25-1/2" [647.7]	27-3/8" [695.3]	SAME AS 'Y'	9" [228.6]
		46" - 55" [1145 - 1397]	28-1/2" [723.9]			15-1/2" [394]	26-1/2" [673.1]		9" [228.6]	13" [330]

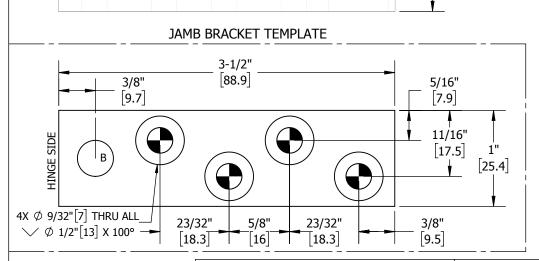

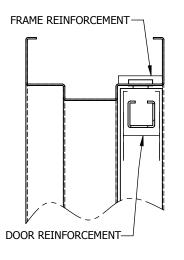

Cut out and tape parallel to frame at the "B" measuremnt from step 2.

DRAWING NO: I-CL00317

HAGER COMPANIE

REV:07

SHEET 3 OF 3

HAGER COMPANIES 139 Victor Street, St. Louis, MO 63104 - (800) 325-9995 - Fax (800) 782-0149

1/4" 6.4