




Description Of Operation: Activation of Auto Operator releases electric strike and opens door.

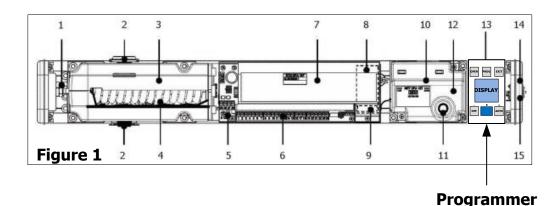

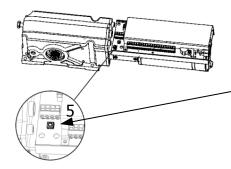

Enter Programming mode

Press and hold multifunction push button/control until LED flashes red 4 times. After the 4th red flash release the multifunction push button/control.

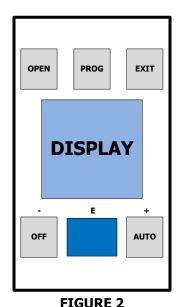

Programming (Refer to Figure 2)

(PROGRAMMER REFER TO FIGURE 2)

- 1) Press and release + (AUTO) to navigate to 'Param STG'.
- 2) Press **E (BLUE BUTTON)** to enter parameter settings.
- 3) Press and release + (AUTO to navigate to 'Locking'.
- 4) Press **E (BLUE BUTTON)** to enter 'Locking'.
- 5) Press **E (BLUE BUTTON)** to enter 'Lock Function'.
- 6) Press and release + (AUTO) to navigate to 'Always Locked'.
- 7) Press **E (BLUE BUTTON)** to select 'Always Locked'.
- 8) Press and release **PROG** button until display reads 'Quit menu item'.
- 9) Press **E (BLUE BUTTON)** to exit programing.

T-CL00647

8400 Series Low Energy Operator with Electric Strike Installation and Programming Instructions I-CL00647


Description Of Operation: Activation of Auto Operator releases electric strike and opens door.

Electrical Output: .5A at 24VDC

Products:

Hager 8418 Low Energy Operator

24VDC Electric Strike Hardwired Actuators

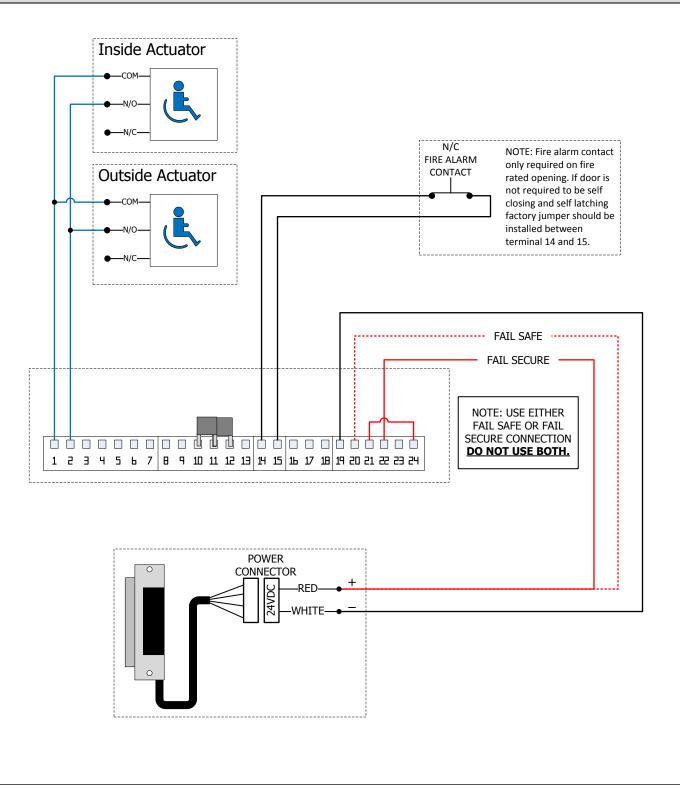



8400 Series Low Energy Operator with Electric Strike Installation and Programming Instructions I-CL00647

Description Of Operation: Activation of Auto Operator releases electric strike and opens door.

Electrical Output: .5A at 24VDC

Products:

1ea Hager 8418 Low Energy Operator

1ea 24VDC Electric Strike

2ea 2-659-0172 or 2-659-0173 Hardwired Actuators

1ea 2-659-0183 Wireless Receiver

2ea 2-659-0184 or 2-659-0185 Wireless Transmitters

