


Sliding Door Hardware – 9611 & 9612 - By-Pass Installation Instructions I-SD00322

CONTENTS	9611	9612	
1. TRACK (9821)	2	2	4. 10. 1.
2. CARRIER	4 (9824)	4 (9825)	
3. QUICK RELEASE PLATE(9610)	4	4	11
4. FLOOR GUIDE (9115)	1	1	
5. #8 X 1-1/2" PPHS	5	5	9.
6. #8 X 3/4" PPHS	2	2	
7. #8 X 1" PPHS	8	8	5. 6. 2. 9.6
8. #8 X 5/8" TPHS	16	16	Suppliment & Jun
9. SPACERERS	2	2	3. 8.
10. DOORSTOP (9880)	1	1	7
(sold separately)			S Maller Comp
11. PULL	2	2	a a she
(Sold separately)			, view of the second se

1 PREPARE OPENING

OPENING HEIGHT MAX = DOOR HEIGHT + 3-3/16" OPENING HEIGHT MIN = DOOR HEIGHT + 2-9/16"

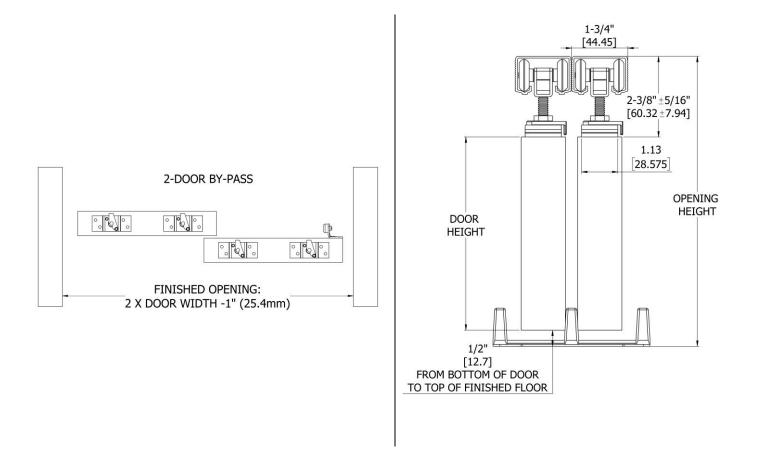




Sliding Door Hardware - 9611 & 9612 - By-Pass **Installation Instructions** I-SD00322

æ

Ξ.


2 INSTALL TRACK AND HANGERS

- Center tracks in opening, flush for 1-3/8" doors, or with spacer • kit for 1-3/4" doors. Secure with (#8 x 1") screws
- Leave a 1" gap between right end of track and door frame to • allow for carrier removal
- Center quick release plates on door thickness
- Mount left plate edge 1" from near left door edge
- Mount right plate edge 2-3/4" from near right door edge
- Secure Carriers onto door with (#8 x 1") screws

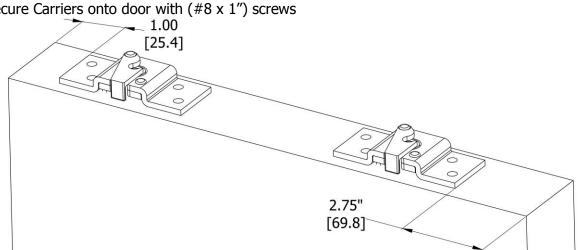

3 HANG DOORS

- Open quick release latches on brackets
- Slide door onto carrier and close hatch
- Repeat for front door on front rail

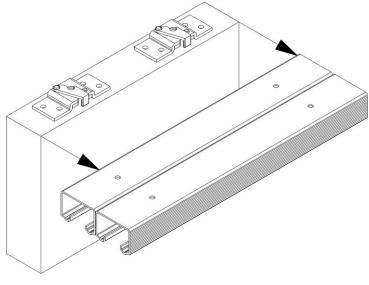

4 ADJUST AND FINISH

- Adjust carriers so door is square with frame •
- Install door guides in center of opening, where doors overlap using (#8 X 1-1/2") screws
- Drill appropriate dimensioned hole to mount door pull (optional)
- Install stops (optional)

