## **Cam Assembly Instructions**

**NOTE:** These instructions do not apply to the **720B-DM direct drive** cam lock. The 720B-DM uses

different cams and cam shifter mechanism.

## For 1-1/8" Diameter Cam Locks 720, 820, 920, CR25, ME93, SA54, and YA93

(excludes 720B-DM)

Above referenced 1-1/8" diameter cam locks ship standard with A, B and C cam shifters (pictured below).







720-CDLM lost motion cam shifter (non-key-retaining)

720-CDDM720-KRkey retainingkey retainingdoor cam shifterdrawer cam shifter

## 820 requires proper installation of universal driver into back of cylinder

## (see picture at right)

The 820 Series includes universal driver (item no. 10-360). For cam rotation to work properly, the supplied universal driver must be installed under the cap at the back of the cylinder in either of the 2 vertical positions indicated at the right (with tab to the left or right only). DO NOT install universal driver in the horizontal (tab up) position. Schlage compatible cylinder



Correct universal driver position for 820 cam lock

The cam shifter and cams must be assembled per the below instructions to achieve the proper handing and operation. To make cam assembly easier, it is recommended that a core is installed into the lock before the cam and cam shifter is assembled onto the back of the lock.





