

## Installation Instructions

## 777

## **Typical Installation**

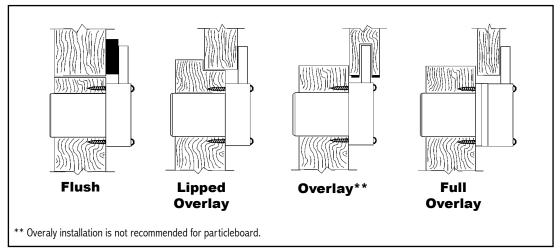

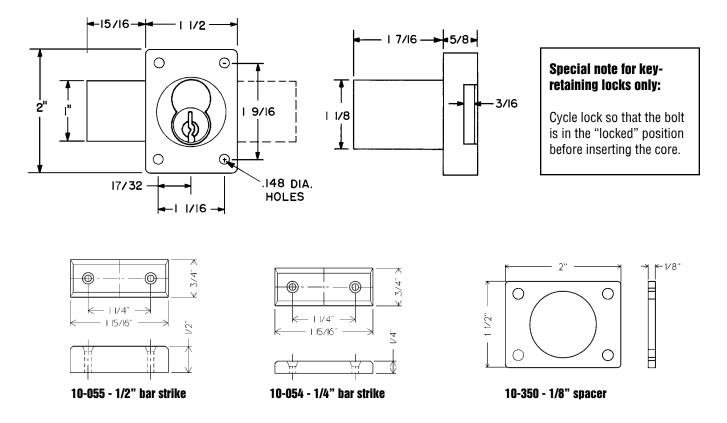

Use of spacers and strikes depends on application and material thickness.

