


PH60

INSTALLATION INSTRUCTIONS



1. Disassemble the pivot as shown by unscrewing the side set screw.
2. Mortise the threaded pivot leaf at the bottom of the door.
3. Mortise the bearing pivot leaf into the floor.
4. Place the washer between the two leaves and thread the pivot pin down
5. Secure installation by tightening the set screw.

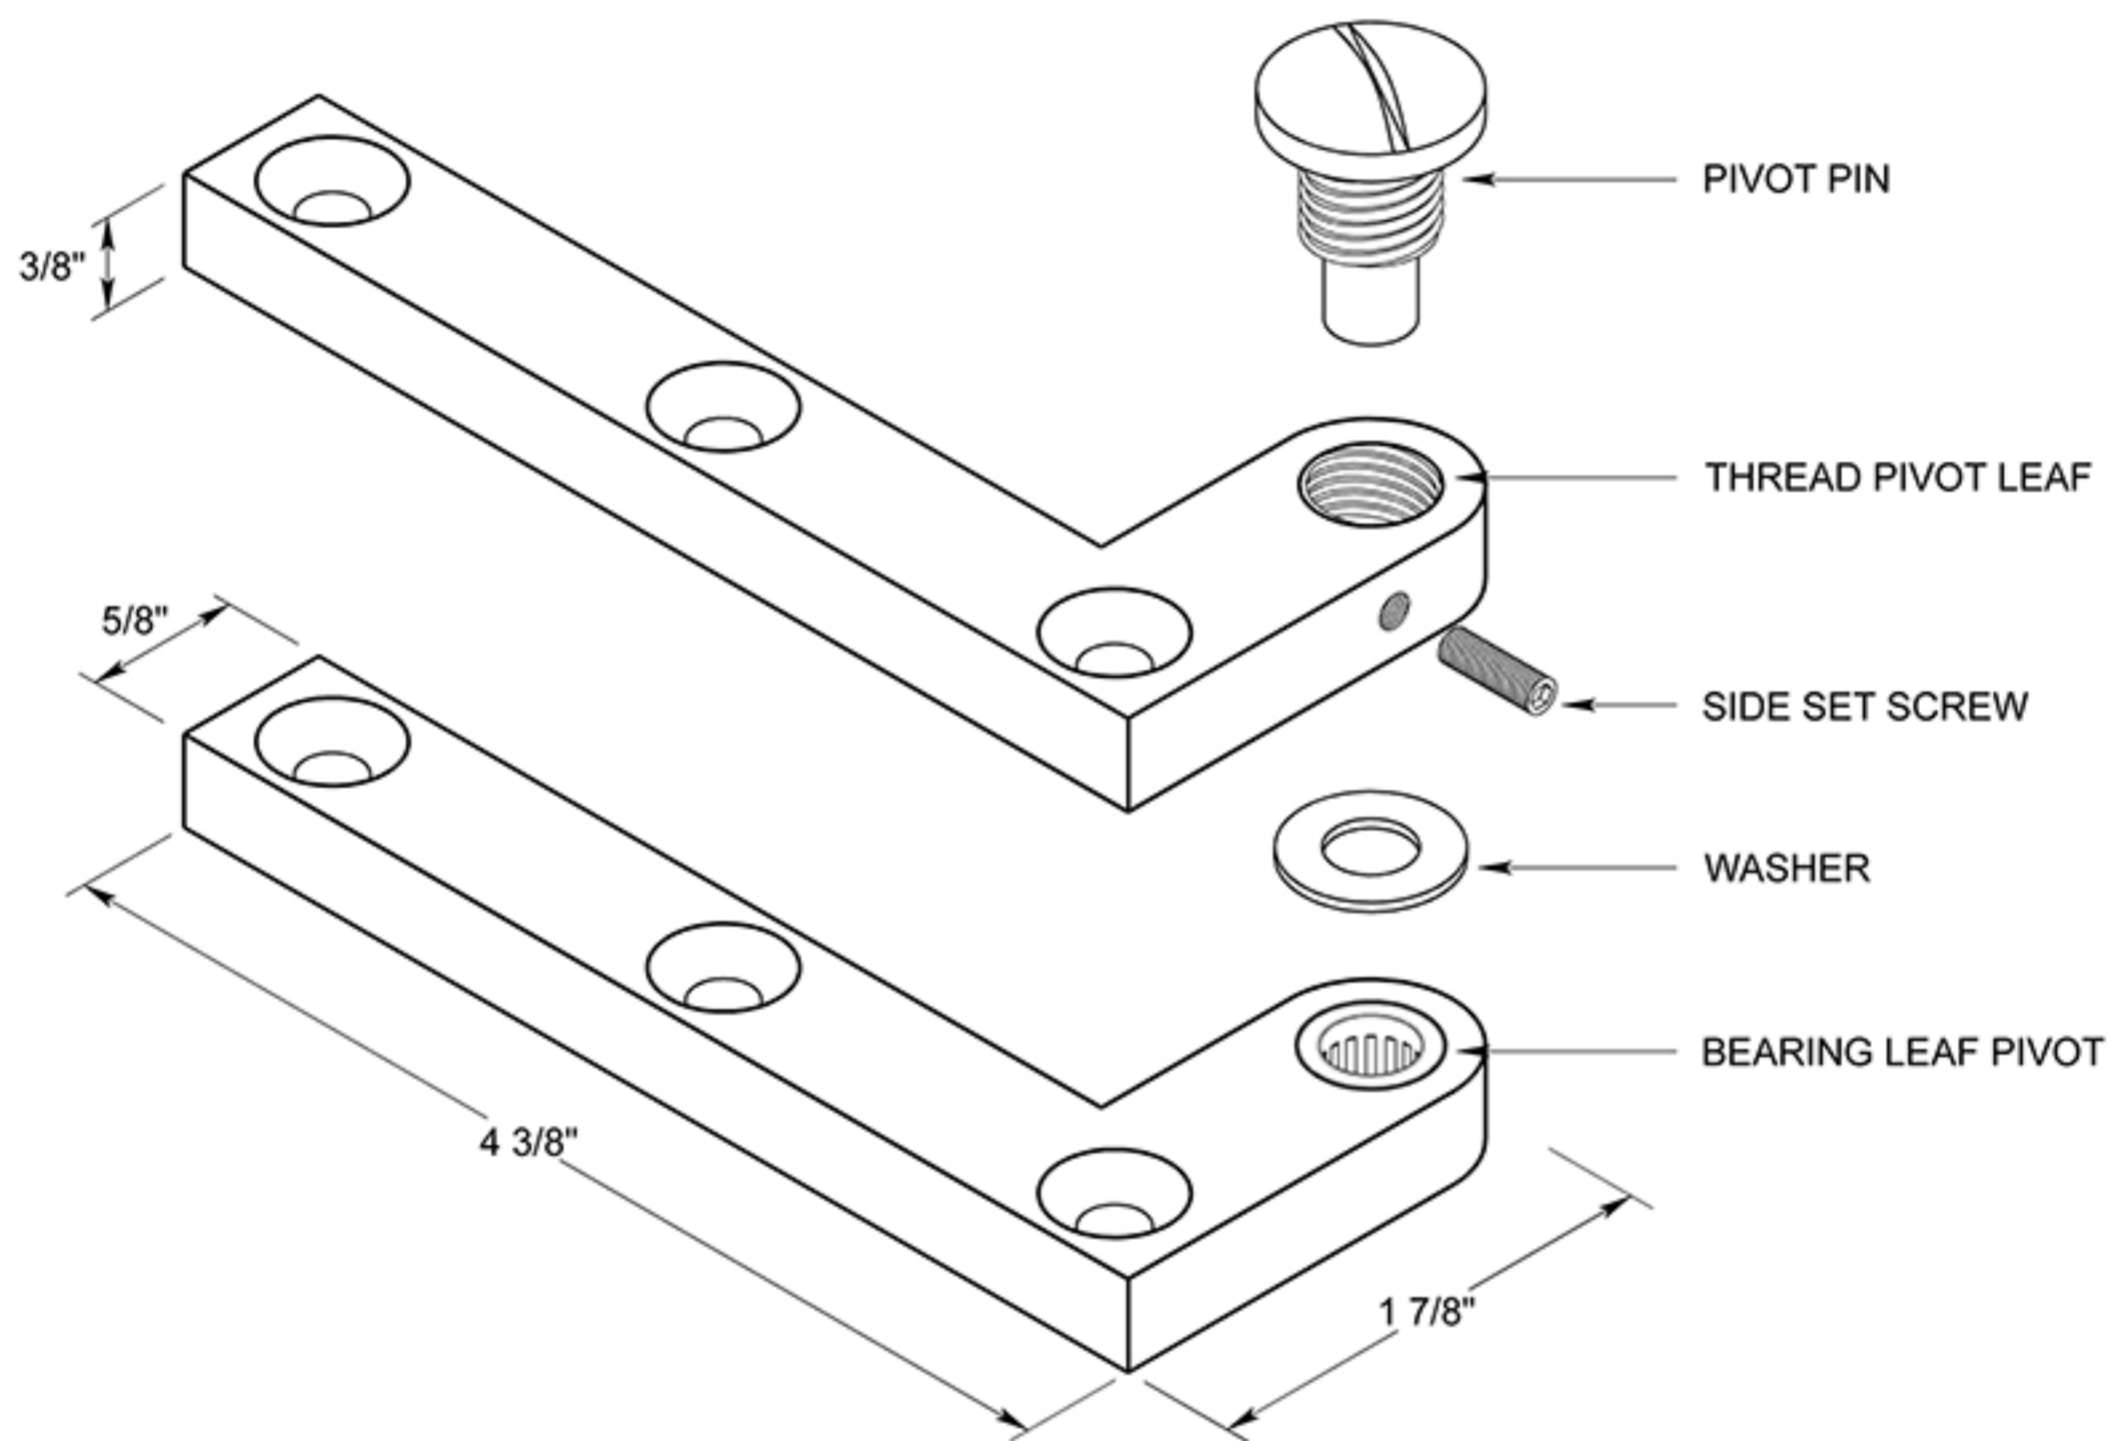

DRAWING NOT TO SCALE

NOTE: Deltana reserves the right to constantly improve its products and is not responsible for differences between the product in-hand and the specifications contained in this drawing. We do not recommend to pre-drill holes or pre-cut woods or metals based on the drawing information if the veracity of the specifications has not been proven by the live product.