


INSTALLATION INSTRUCTIONS AIR GAP KIT

NEWPORT BRASS®

Flawless Beauty. From Faucet to Finish.™

Model No's:

**3170-5711, 3200-5711, 3210-5711,
3160-5711, 3180-5711, 3190-5711,
1500-5711, 3220-5711**

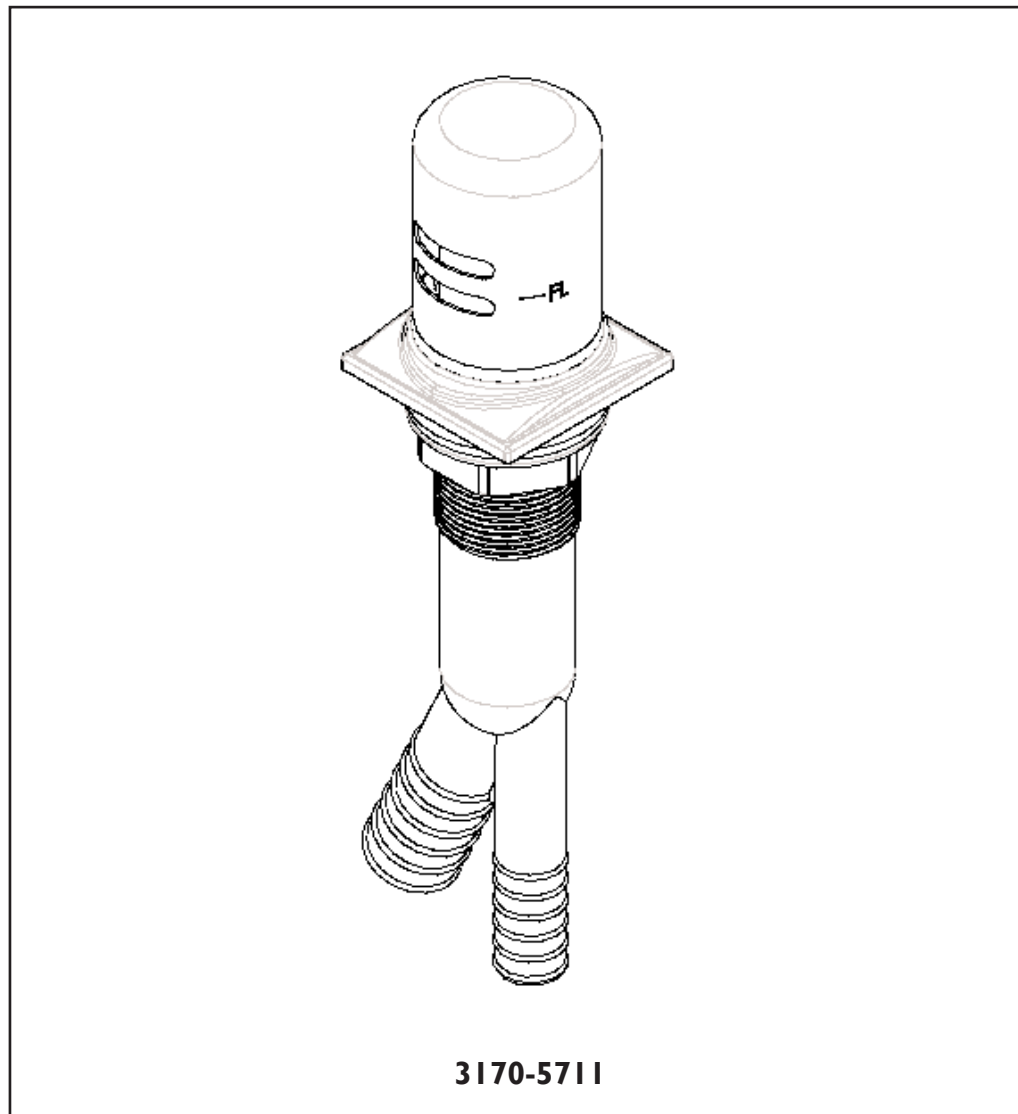

2001 CARNEGIE AVE, SANTA ANA CA 92705

(949) 417-5207

WWW.NEWPORTBRASS.COM

