


A

Ø 3/8" (9.5mm)



10" Back To Back Door Hardware Mounting Instructions

- ▲ Refer to the template on this page for hole locations (A and B).
- ▲ Drill holes in door 3/8" not to exceed 7/16" diameter at 10" on center.
- ▲

Mounting Code	Door Thickness	
BBMTG1	suit for 1-3/8" up to 1-3/4" (34.0-45.0mm)	Included
BBMTG2	suit for 1-3/4" up to 2-3/8" (45.0-60.0mm)	Sold Separately
BBMTG3	suit for 2-3/8" up to 3" (60.0-77.0mm)	Sold Separately
BBMTG4	suit for 3" up to 3-1/2" (75.0-90.0mm)	Sold Separately
BBMTG5	suit for 3-1/2" up to 4" (88.0-102.0mm)	Sold Separately
- ▲ Back to back pulls come factory assembled - in order to properly install you must loosen the set screws and separate the two pulls.


Folding Line

3-1/2"

3"

2-1/2"

Door Edge

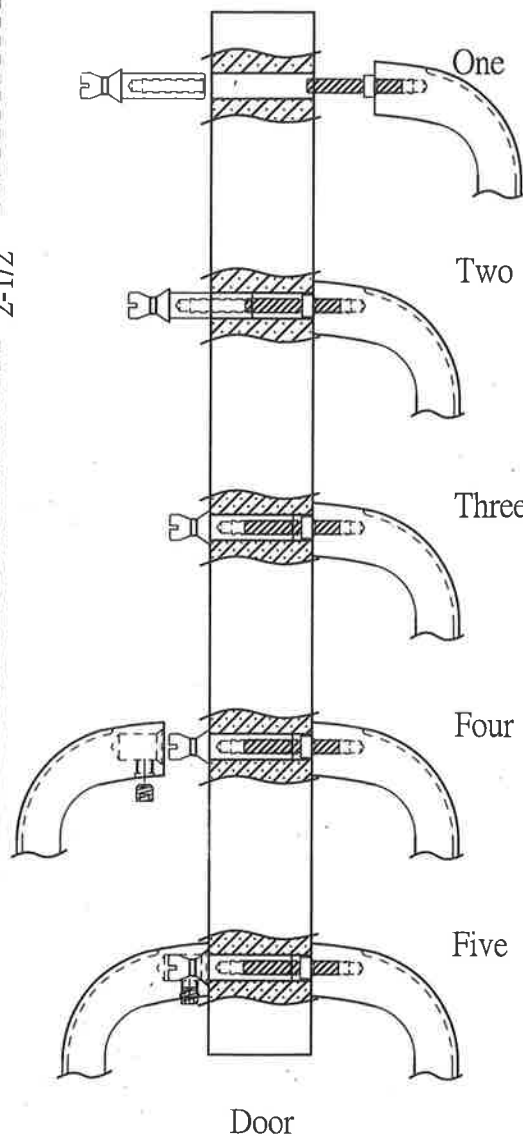

One :

Unscrew spindle from threaded shank keeping threaded shank fully inserted into door pull and tighten.
Pass threaded shanks through predrilled holes in door.

Two

Two :

Take spindle and prepare to screw onto threaded shank from other side of door.

Three

Three :

Screw spindle onto threaded shank until it stops and tighten.

Four

Four :

Insert second pull over both the spindles.

Five

Five :

Tighten both set screws.

10"

