


INSTALLATION INSTRUCTIONS FOR No. 9262 POCKET DOOR LOCK

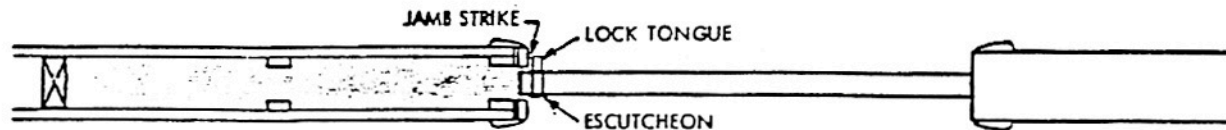

CLOSET DOOR HARDWARE
HAGER HINGE CO. St. Louis, MO 63104 U.S.
(314) 772-4400



3/4" From
Moulding

36"

1. Drill 1/8" Guide Hole through door as shown.

2. Start 1" dia. hole from strike side. Finish from escutcheon side.

3. Mount lock as shown. Position Jamb Strike on jamb moulding 1/4" above center of Lock.