


NOTES:

1. TEMPLATE DERIVED FROM A156.115-2014 FOR METAL DOORS
2. 3300 LOCKSETS REQUIRE #8-32 FLAT HEAD UNDERCUT SCREWS FOR MOUNTING ON METAL FRAMES. THESE SCREWS ARE NOT INCLUDED IN THE STANDARD UNIT BOX. SEE CHART FOR AVAILABLE SCREWPACKS.
3. CENTERLINE OF STRIKE MOUNTING HOLES MUST COINCIDE WITH THE CENTERLINE OF THE DOOR AS IT SITS IN THE FRAME.


REV.	DESCRIPTION	ECO NO.	DATE
-	CREATED PER CUSTOMER REQUEST	OT18001	5/8/2018

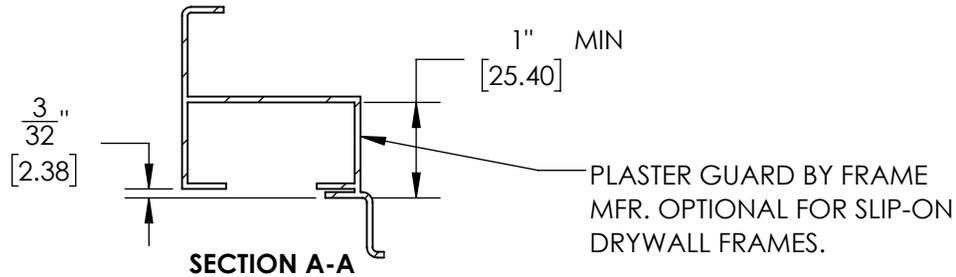

REQUIRED SCREWS: #8-32 x 1/4" UPHS

AVAILABLE FROM HAGER: #8-32 x 3/4" UPHS (COMBO), 100 COUNT PACKS.

FINISH	PART #
US3/4/10	2-300-0087
US10B	2-300-0089
US15/26/26D	2-300-0090

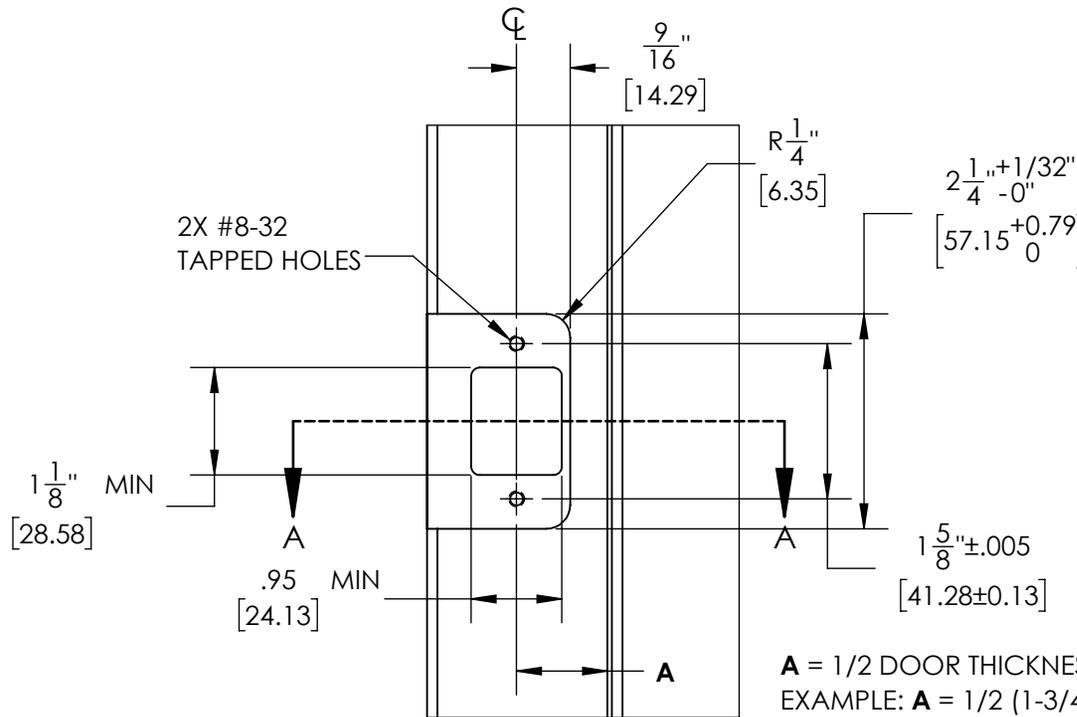

	DRAWN	KJW	5/8/2018	2300 / 3300 SERIES METAL JAMB TEMPLATE, FULL LIP STRIKE		
	ENG. APPR.	-	-			
	DO NOT SCALE DRAWING HAGER RESERVES THE RIGHT TO MAKE DESIGN CHANGES WITHOUT NOTICE. CALL HAGER ENGINEERING AT 1-800-325-9995 FOR THE LATEST REVISION DATE OF TEMPLATE.				SIZE DWG. NO. A T-LS02294	REV. -
SCALE:1:2		WEIGHT: 6.730		SHEET 1 OF 1		