
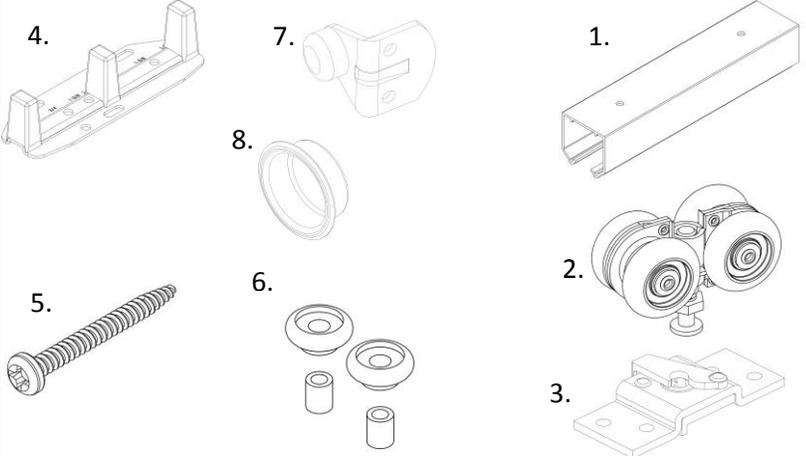
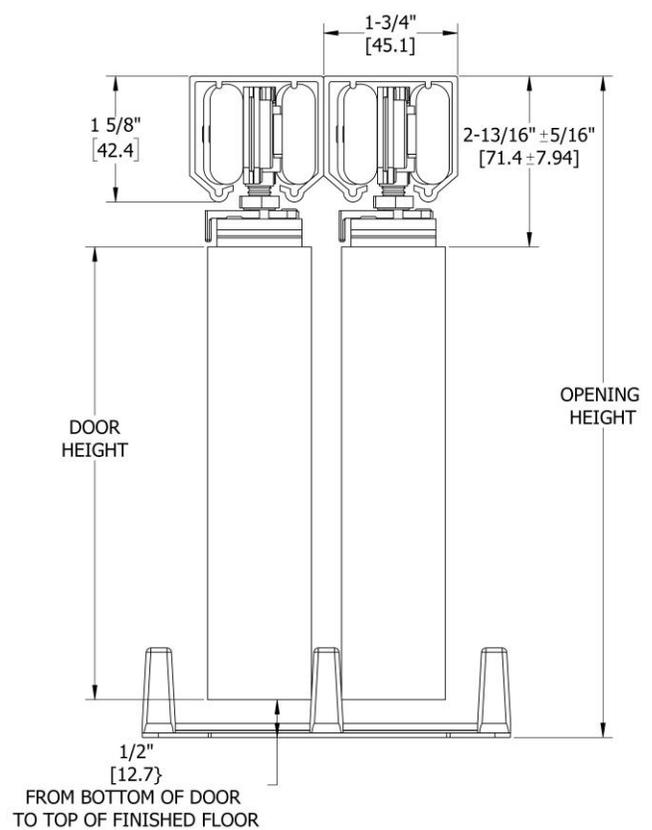


CONTENTS	9875	
1. TRACK (9801)	2	
2. CARRIER (9827)	4	
3. QUICK RELEASE PLATE (9610)	4	
4. FLOOR GUIDE (9909)	1	
5. #8 X 1-1/2" PPHS	39	
6. SPACER KIT (9574)	1	
7. DOORSTOP (9880)	1	
8. PULL (Sold separately)	2	
		(sold separately) (Sold separately)



1 PREPARE OPENING

OPENING HEIGHT MAX = DOOR HEIGHT + 3-5/8"
 OPENING HEIGHT MIN = DOOR HEIGHT + 3"

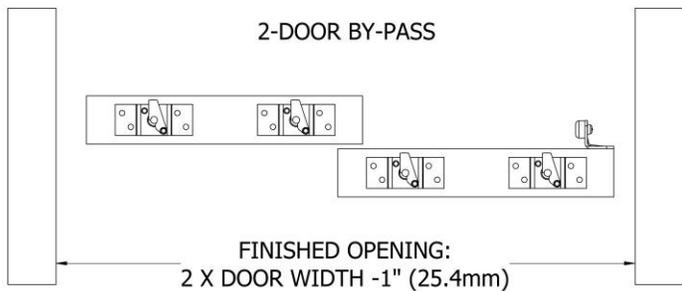


2 INSTALL TRACK AND HANGERS

- Center tracks in opening, flush for 1-3/8" doors, or with spacer kit for 1-3/4" doors. Secure with (#8 x 1-1/2") screws
- Leave a 1" gap between right end of track and door frame to allow for carrier removal
- Center quick release plates on door thickness
- Mount left plate edge 1" from near left door edge
- Mount right plate edge 2-3/4" from near right door edge
- Secure Carriers onto door with (#8 x 1-1/2") screws

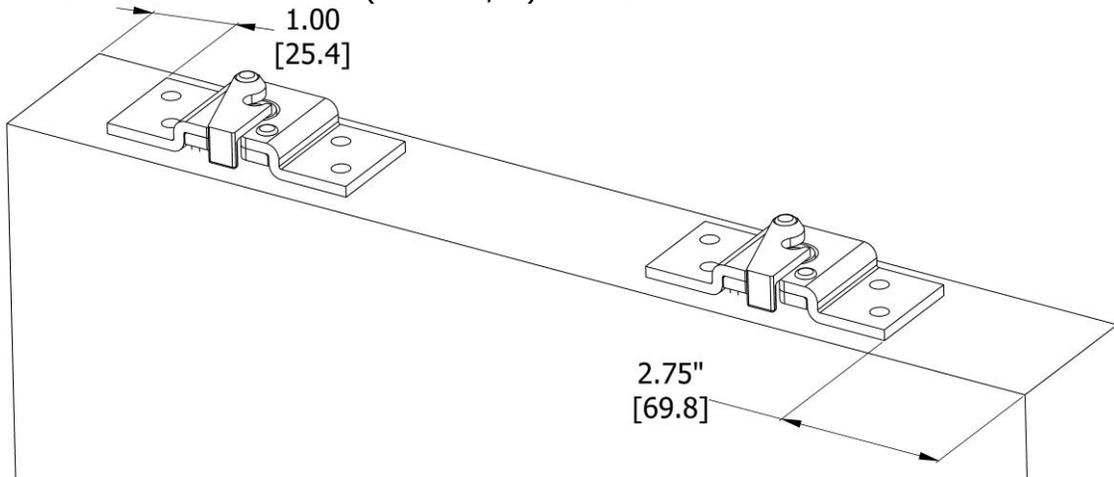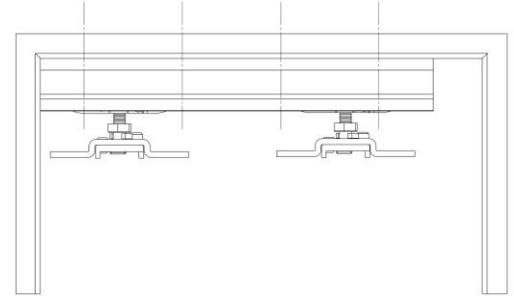

3 HANG DOORS

- Open quick release latches on brackets
- Slide door onto carrier and close hatch
- Repeat for front door on front rail

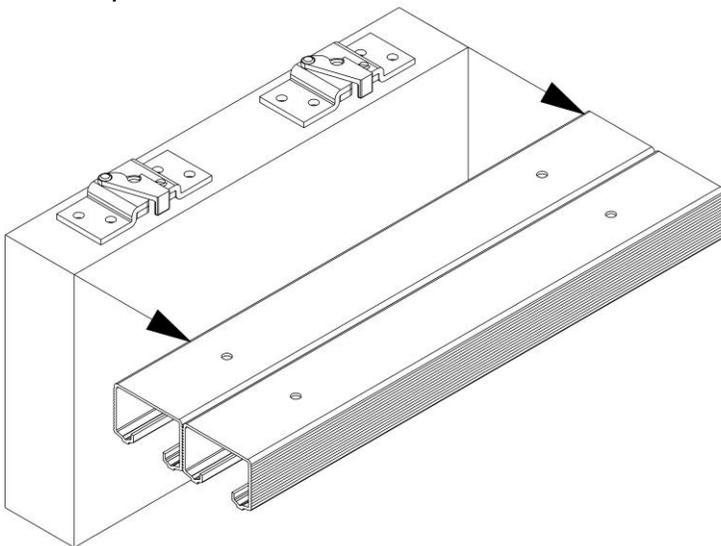

4 ADJUST AND FINISH

- Adjust carriers so door is square with frame
- Install door guides in center of opening, where doors overlap using (#8 X 1-1/2") screws
- Drill appropriate dimensioned hole to mount door pull (optional)
- Install stops (optional)

