INSTALLATION INSTRUCTIONS FOR 9264 FOLDING DOOR LOCK

ROOM SIDE OF PANELS 1. Bore ¾" hole. To prevent splintering, start from room side, finish from closet side. CLOSET SIDE OF PANELS 2. Mount lock with screws provided. Turn lock hook to locked position. Leave key in lock.

CLOSET SIDE OF CENTER PANELS


3. Hold lock strike in place. Mark and drill screw hole in horizontal slot only.

Keep 1/16" clearance LOCK between lock hook and STRIKE



 Adjust lock strike LEFT TO RIGHT until lock hook has slight clearance from lock strike. Tighten screw.

Drill holes in vertical slots and insert screws. FOR PASSAGE DOORS, WHERE LOCK STRIKE IS ATTACHED TO JAMB, USE FLAT STRIKE.

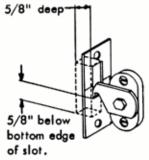


Hold strike so stamped lines on strike are level with top edge of hook. Mark slot outline with pencil. Cut mortise into jamb as shown.

NOTE: For 1-3/4" Doors use 1" Dia. Trim Ring #9263



CLOSET DOOR HARDWARE HAGER HINGE CO. St. Louis, MO 63104 U.S.A. (314) 772-4400

INSTALLATION INSTRUCTIONS FOR 9264 FOLDING DOOR LOCK

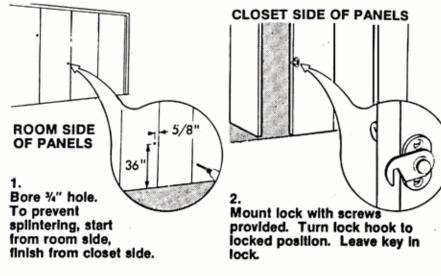

CLOSET SIDE OF CENTER PANELS

3. Hold lock strike in place.


Mark and drill screw hole in horizontal slot only.

Keep 1/16" clearance between lock hook and lock strike.



 Adjust lock strike LEFT TO RIGHT until lock hook has slight clearance from lock strike. Tighten screw.

Drill holes in vertical slots and insert screws. FOR PASSAGE DOORS, WHERE LOCK STRIKE IS ATTACHED TO JAMB, USE FLAT STRIKE.

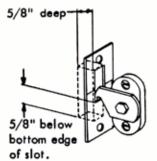

Hold strike so stamped lines on strike are level with top edge of hook. Mark slot outline with pencil. Cut mortise into jamb as shown.

NOTE: For 1-3/4" Doors use 1" Dia. Trim Ring #9263



CLOSET DOOR HARDWARE HAGER HINGE CO. St. Louis, MO 63104 U.S.A. (314) 772-4400