



4960R SHIM KIT INSTRUCTIONS

FOR USE WITH 4600 NARROW STILE EXIT DEVICE

INSTRUCTION NO: 27390056

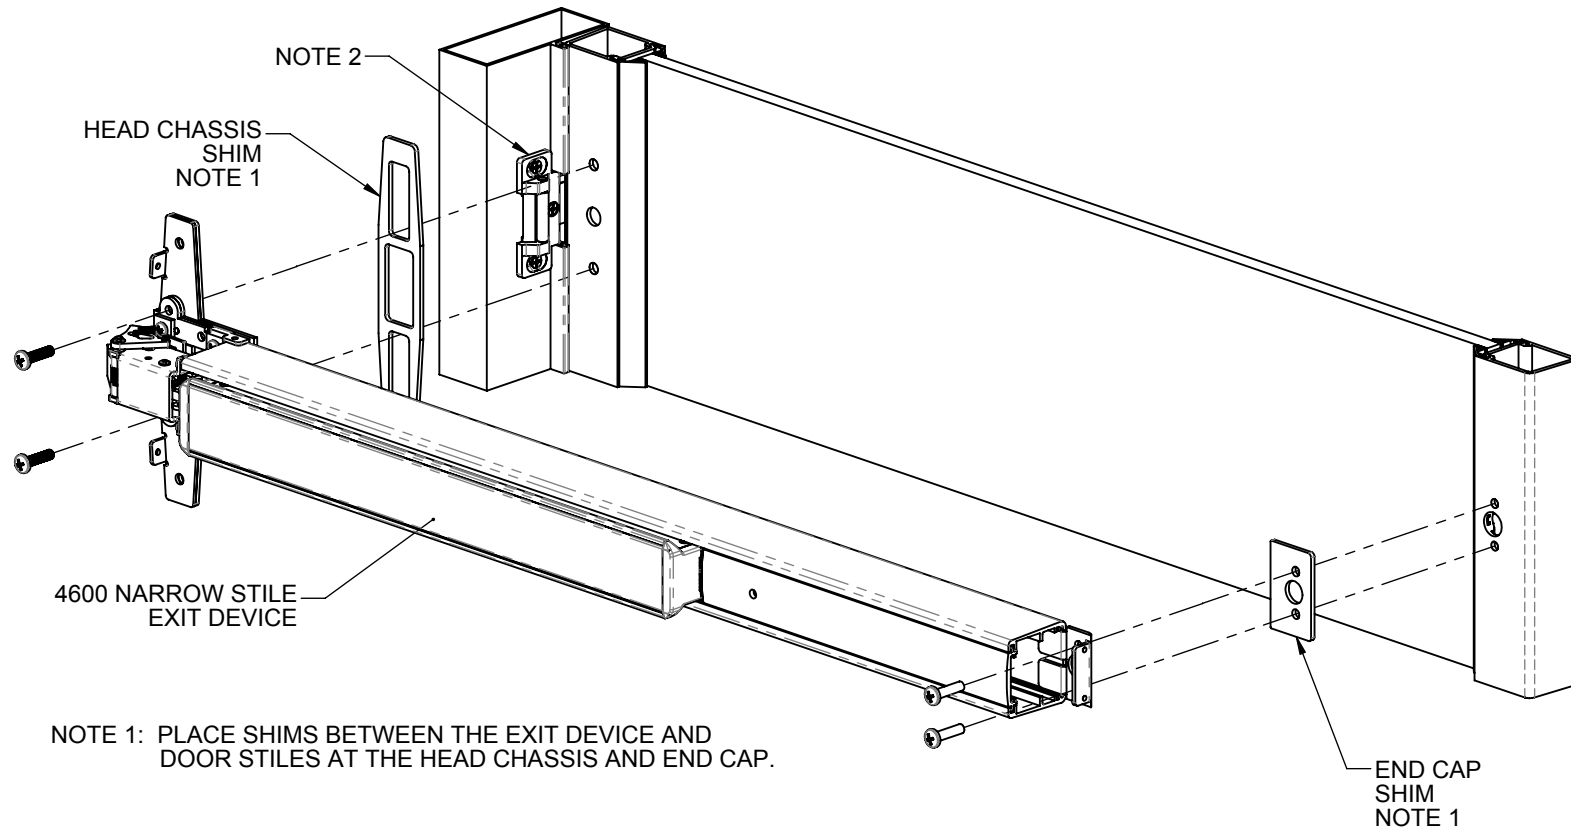


NOTE 1: PLACE SHIMS BETWEEN THE EXIT DEVICE AND DOOR STILES AT THE HEAD CHASSIS AND END CAP.

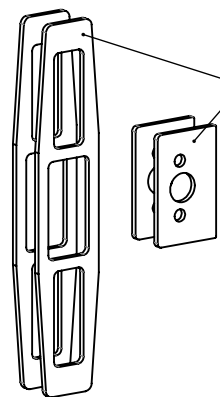

SHIM KIT INCLUDES:

1. TWO 1/8" THICK HEAD CHASSIS SHIMS.
2. TWO 1/8" THICK END CAP SHIMS (WITH WIRE ROUTING HOLE).
3. MOUNTING SCREWS (NOT SHOWN).

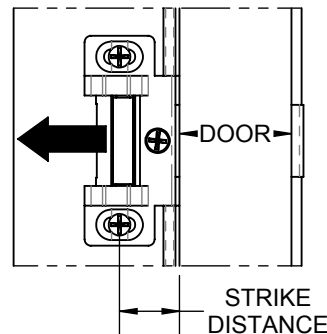

NOTE 2: ADDING SHIMS MOVES THE EXIT DEVICE FARTHER AWAY FROM THE DOOR AND THE STRIKE MUST MOVE WITH THE DEVICE. FOR EACH SHIM ADD AN 1/8" TO THE STRIKE DISTANCE.

