

FIGURE 1

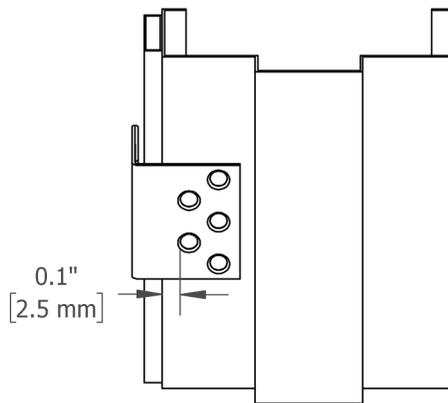


FIGURE 2

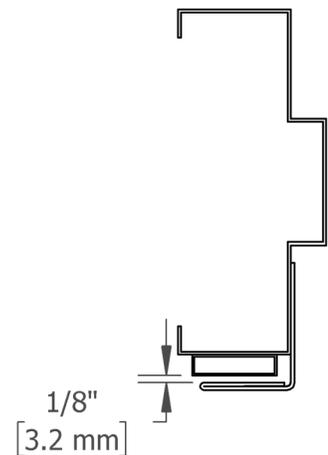


FIGURE 3 (TOP VIEW)

1. Determine mounting height on frame. (Recommend 10" to 12" above interior lever)
2. Place the bracket on frame in orientation shown in Figure 1. Allow for a minimum gap of 0.1" [2.5 mm] between the left edge of holes and the corner of the frame (See Figure 2). Allow for at least an 1/8" [3.2 mm] gap between the pop-on frame and the face side of the bracket (See Figure 3).
3. If possible place privacy door latch (277D) on bracket, and check to make sure the swing arm rotates to the closed position when the door swings completely closed. Also verify that the door will open without issue when the swing arm is in the closed position. Adjust bracket if necessary.
4. Once the bracket is in the desired position on the frame, mark (5) holes for drilling.
5. Center punch and drill (5) 5/32" pilot holes.
6. Install bracket using (5) 12-24 FPH screws.