
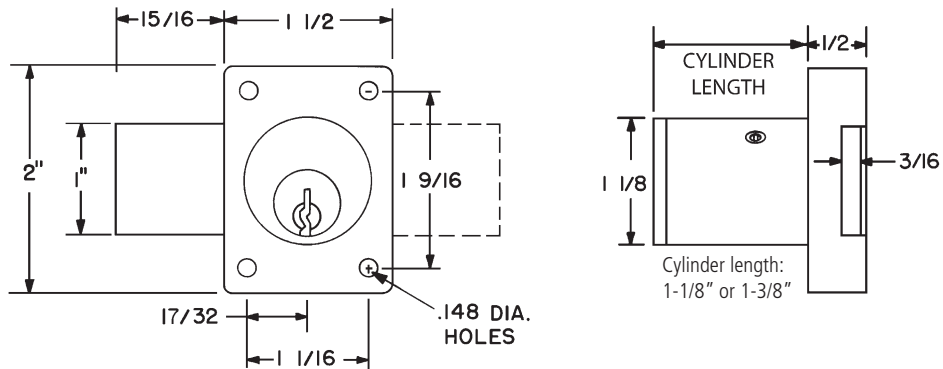



Installation Instructions

700S


Typical Installation

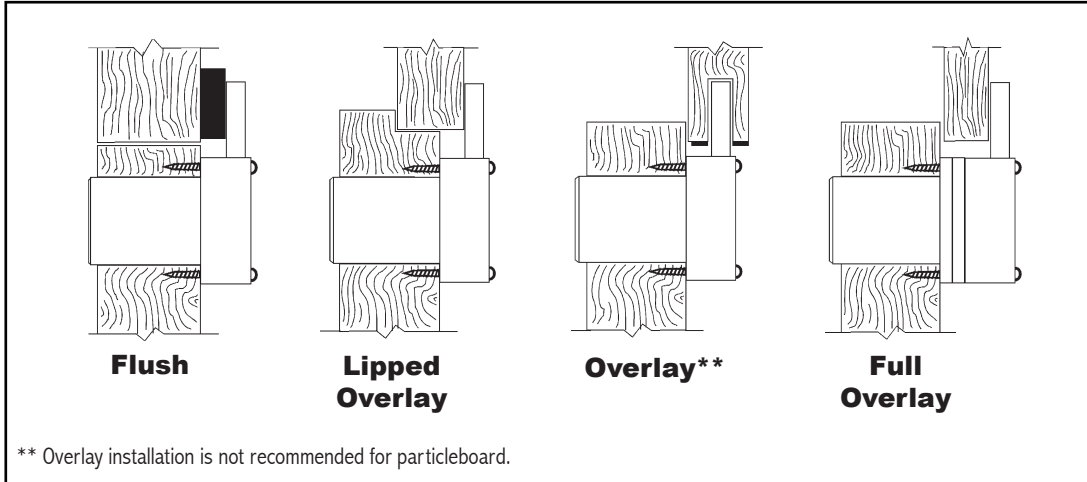


Note: Use of spacers and strikes depends on application and material thickness.

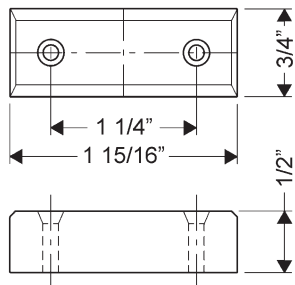

10-055 - 1/2" bar strike

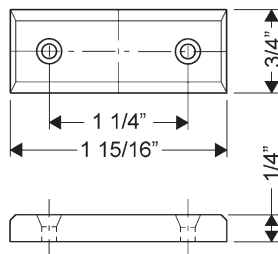

10-054 - 1/4" bar strike

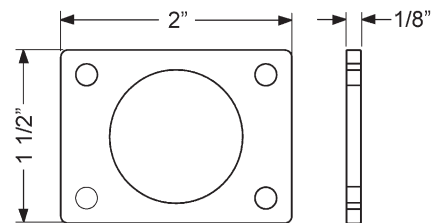

10-350 - 1/8" spacer

Title Installation instructions for 700S series cabinet door lock				
Series 700S	Barrel Length 1-1/8" or 1-3/8"	Bolt type Deadbolt	Mounting Surface	Revision Date 08/2015

