


920LM/DM

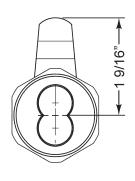

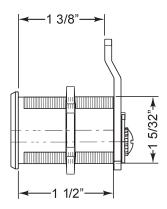






IMPORTANT:

It is highly recommended that you install the **cam/prong driver** and **lock cylinder** into the lock body and cycle to the locked position **before** assembling cam, cam shifter and stop pin onto the back of the lock.

Typical Installation

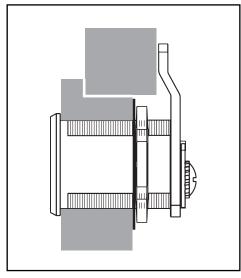

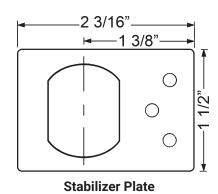

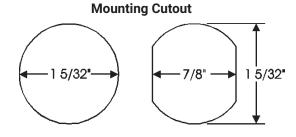

Lock diameter is 1-1/8". Drilled hole should be slightly larger.

Installation instructions for 920LM/DM series cam lock				
Series	Barrel Length	Bolt type	Mounting	Revision Date
920	1-7/16"	Cam lock	Surface	09/2014



920LM/DM

Assembled with vertical long cam 720-3-2 or extra long 3" cam 720-3-4



(non-key-retaining)








720-KR
retaining drawer
cam shifter
720-CDDM (A Side
key retaining door
cam shifter

key retaining door cam shifter

IMPORTANT! If your cam has a brass pin between the two notched cut outs use these instructions, otherwise see page 3.

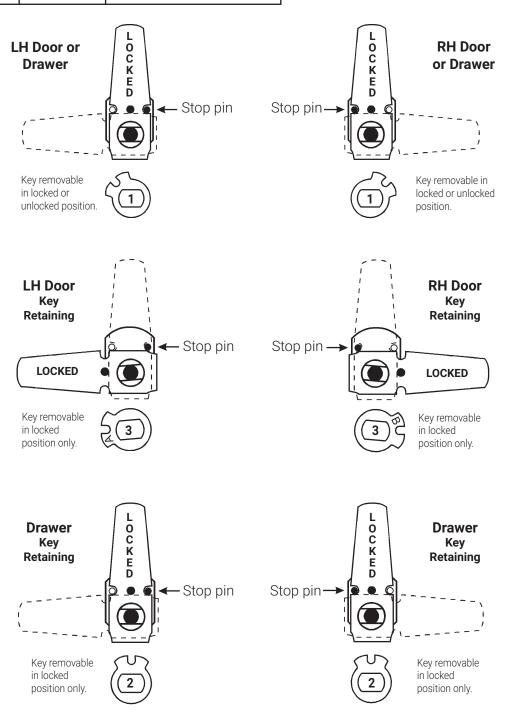



920LM/DM

Assembled with vertical long cam 720-3-2 or extra long 3" cam 720-3-4










720-KR key retaining drawer cam shifter

720-CDDM (A Side)
key retaining door
cam shifter

720-CDDM (B Side)
key retaining door
cam shifter

IMPORTANT! If your cam has a brass pin on the bottom of the cam use these instructions, otherwise see page 2.

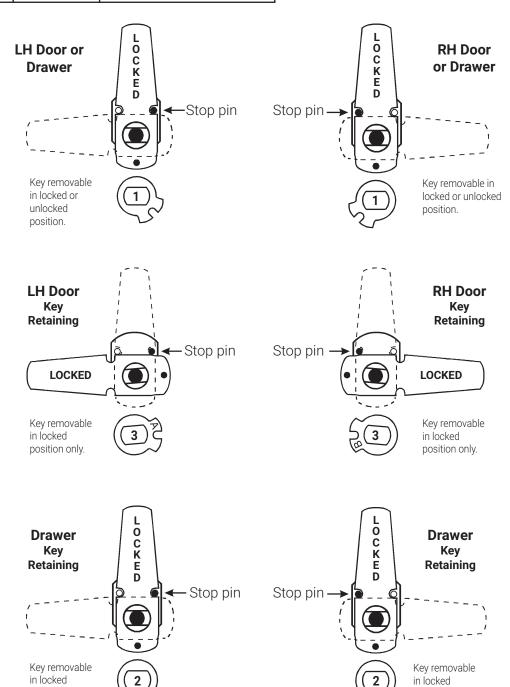


position only.

position only.

LOCK, INC.

920LM/DM

Assembled with short cam 720-3-1

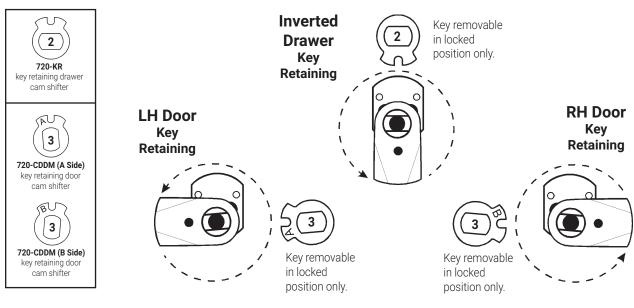

Assembled with inverted long cam 720-3-3 or 720-3-5

