
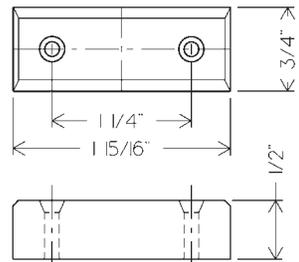
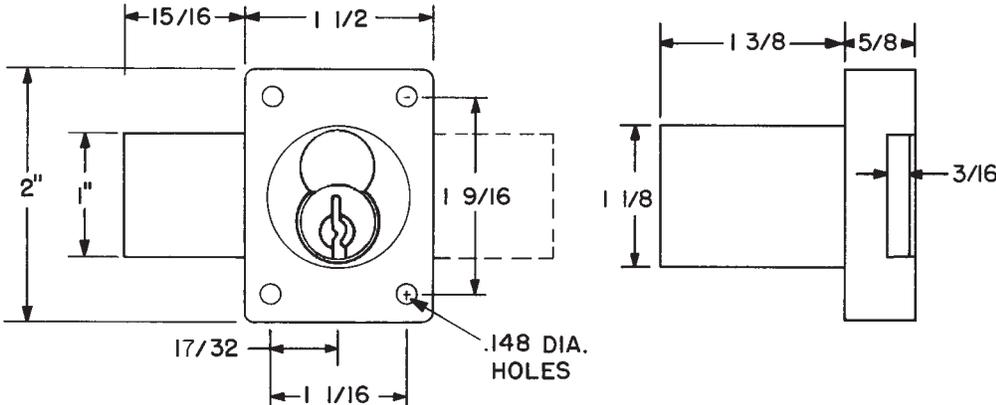



Installation Instructions

931DR


Typical Installation

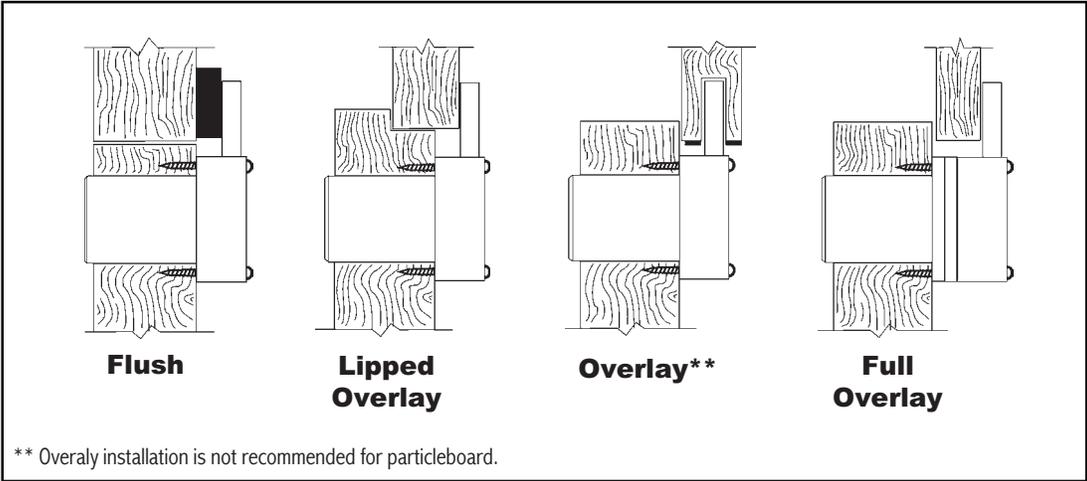

10-055 - 1/2" bar strike

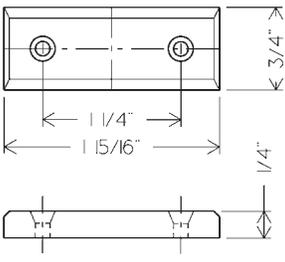

10-054 - 1/4" bar strike

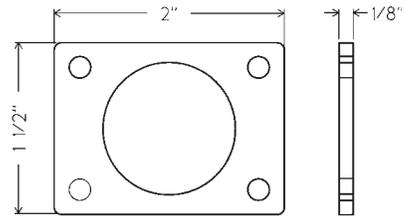

10-350 - 1/8" spacer

Title Installation instructions for 931DR series cabinet lock				
Series 931DR	Barrel Length 1-3/8"	Bolt type Deadbolt	Mounting Surface	Revision Date 11/2006

