
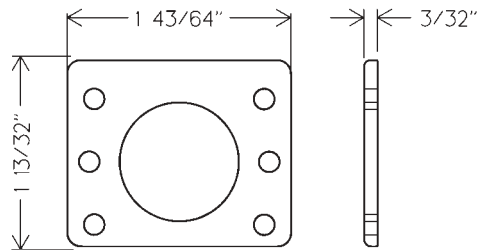
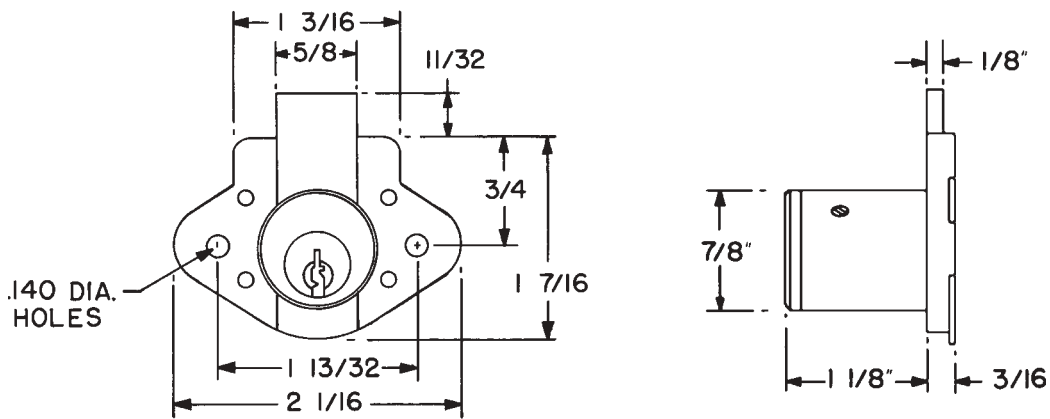


Installation Instructions

R078

Typical Installation

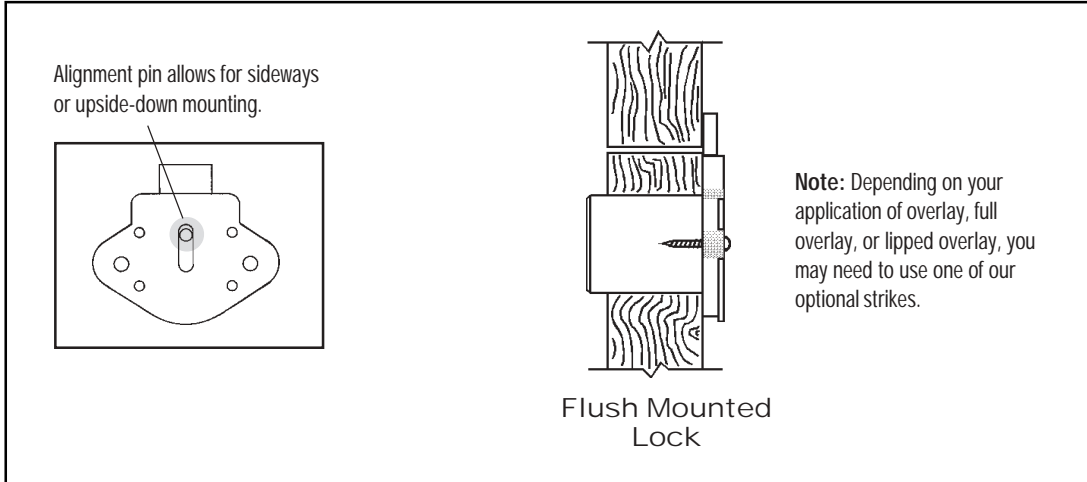

Optional WP21 - 3/32" spacer

Use of spacers and strikes depends on application and material thickness.

Title Installation instructions for R078 series cabinet lock				
Series R078	Barrel Length 1-1/8"	Bolt type Deadbolt	Mounting Surface	Revision Date 06/2004

