
Architectural Door Accessories

ASSA ABLOY

The global leader in door opening solutions

Rockwood 491-RKW Automatic Door Stop & Holder

NOT TO SCALE

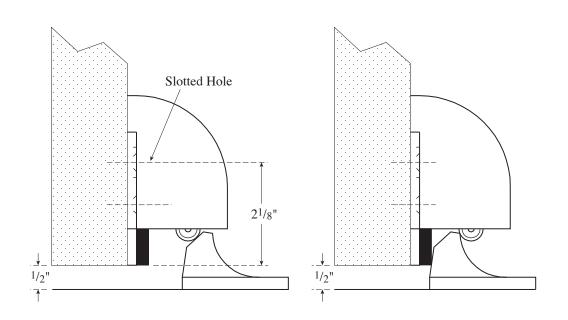

Template T-491-RKW

Effective date: January 1, 2017 Supercedes: All Previous

NOTE: ASSA ABLOY reserves the right to make product changes and is not responsible for obsolete template errors. To ensure your template is current, please visit our website at www.rockwoodmfg.com or call us at 800-458-2424

FASTENERS

 $^{\#}491$ - (three) $^{\#}12 \times 1^{1}/4$ " flat head wood screws, (three) plastic anchors and (four) $^{\#}10 \times 1^{1}/4$ " flat head wood screws.

 $\frac{\#491R}{12}$ - (three) $\#12-24 \times 1$ " flat head machine screws, (three) lead anchors and (four) $\#10 \times 1^{1}/4$ " flat head wood screws.

 $^{\#}491S$ - (three) $^{\#}12 \times 1$ " flat head machine screws, (three) lead anchors, (four) $^{\#}10 \times 1$ " flat head machine screws and (four) $^{\#}10-24 \times 1^{3}/8$ " sex bolts.

The #491 is intended for doors with 1/2" clearance under the door.

DRILL SIZE CHART		
#12 Wood Screw	9/64" Soft Wood	5/32" Hard Wood
#10 Wood Screw	1/8" Soft Wood	9/64" Hard Wood
#12 Plastic Anchor	9/32"	
#12 Lead Anchor	1/2"	
#10 Sex Bolt	5/16"	

<u>NOTE</u>: Special order risers are available in situations where there is more than 1/2" clearance.