
Architectural Door Accessories

ASSA ABLOY

Rockwood 594 Roller Latch

The global leader in door opening solutions


NOT TO SCALE

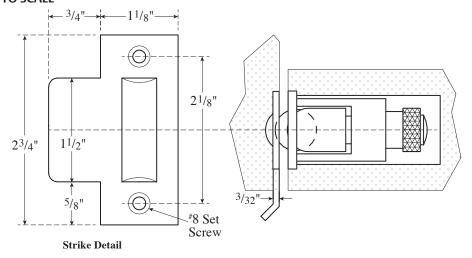

Template T-594

Effective date: January 1, 2017 **Supercedes:** All Previous

NOTE: ASSA ABLOY reserves the right to make product changes and is not responsible for obsolete template errors. To ensure your template is current, please visit our website at www.rockwoodmfg.com or call us at 800-458-2424

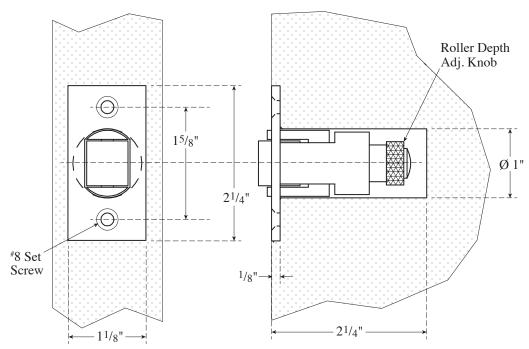

The roller latch can be mounted into the door and the strike into the frame or the strike can be mounted into the door and the roller latch into the frame depending on individual choice. Side jamb or header mounted.

Drill Ø 1" hole x dp. $2^{1/4}$ " for roller latch and mortise W $1^{1/8}$ " x H $2^{1/4}$ " x dp. $1^{1/8}$ " for face plate.

Mortise strike W 1¹/₈" x H 2³/₄" x dp. ³/₃2" mortise W ¹/₂" x H 1³/₄" x dp. ⁷/₃2" center section for roller groove.