


Architectural Door Accessories

ASSA ABLOY

Rockwood 604 Door Guard

The global leader in
door opening solutions

NOT TO SCALE

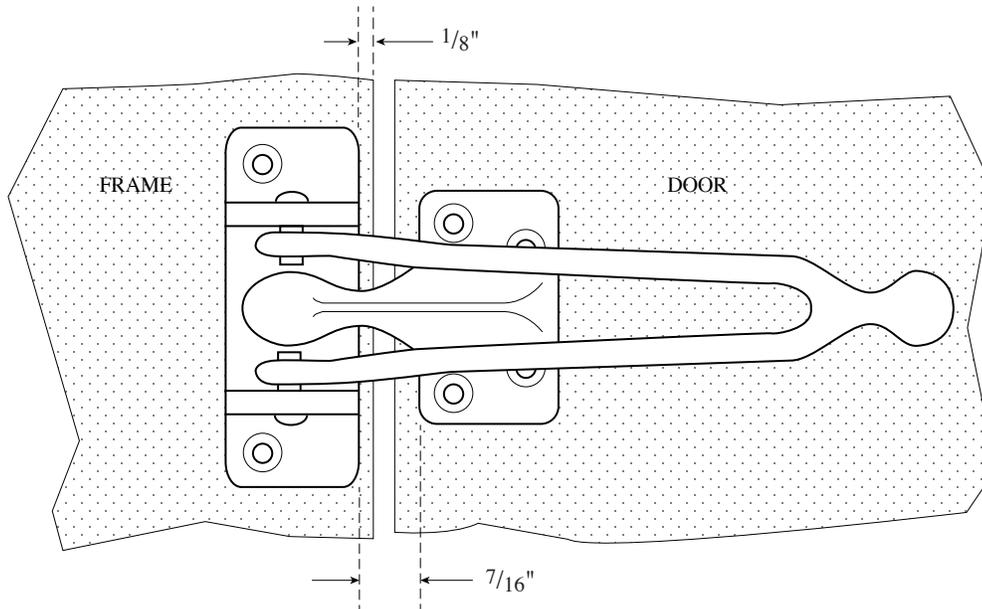

Note: The door guard should be mounted approximately 54" above the floor. (Check with your local authority for any special ADA requirements).

1. Using (three) 1¹/₂" screws mount the base (with swing arm) to FRAME of the door positioning the base 1/8" from edge of frame as shown.
2. Using (four) 3/4" screws mount base (with hook) onto DOOR positioning the base 7/16" from the edge of the opposite base as shown.
3. To check proper alignment and function of the Door Guard swing arm over hook then open door.

Template T-604

Effective date: January 1, 2017
Supersedes: All Previous

NOTE: ASSA ABLOY reserves the right to make product changes and is not responsible for obsolete template errors. To ensure your template is current, please visit our website at www.rockwoodmfg.com or call us at 800-458-2424