

6402, 5502

Widespread Lavatory Faucet Installation Instructions

CALIFORNIA FAUCETS RECOMMENDS THAT ALL PLUMBING PRODUCTS BE INSTALLED BY A LICENSED PROFESSIONAL

IMPORTANT: Read all instructions prior to installation and provide copy of instructions to consumer. Operating Specifications:

Recommended Supply Pressure: 20 to 70 psi **

Maximum Flow Rate: 1.2 gpm

- * Operating pressures between hot and cold supplies should vary no more than 30 psi.
- † If water pressure exceeds 70 psi, install a Pressure-Reducing Valve (PRV).


INSTALLING SPOUT

• Insert spout SHANK (1a) through spout base RING (2) and center hole in sink

NOTE: Sink / Deck recommended hole size is Ø1-3/8"

- Place SS WASHER (3) and FLANGE NUT (4) onto spout SHANK (1a) from below
- Align SPOUT (1) and secure with FLANGE NUT (4)
- With O-RING (5) in place at end of spout SHANK (1a), slide 4-WAY TEE (6) onto spout SHANK (1)
- Place RUBBER WASHER (7), BRASS WASHER (8) and NUT (9) onto spout NIPPLE (1b) and tighten

IMPORTANT: TEE (6) should be tightened to create watertight seal and positioned to allow ease of attachment of valve hoses

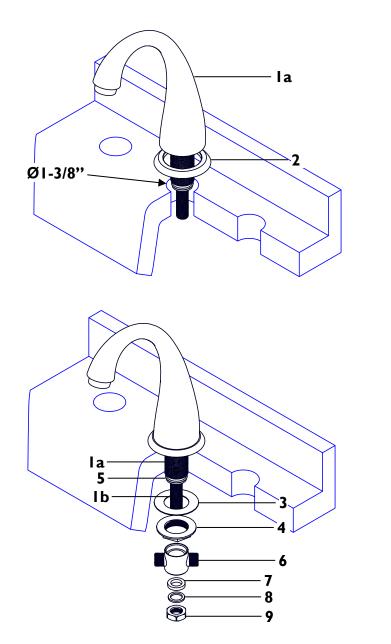

INSTALLING VALVE

• From underneath insert VALVE (10) though appropriate sink/deck hole


IMPORTANT: VALVES (10) are labeled as follows: BLUE is COLD left turning (counter-clockwise) closed RED is HOT right-turning (clockwise) closed


- Position flange NUT (11) and WASHER (12a) so that VALVE (10) extends above sink/deck surface according to table below
- Secure VALVE (10) with TOP NUT (13) and WASHER (12b) noting correct TOP NUT (13) orientation

IMPORTANT: TOP NUT (13) <u>MUST</u> have flat side towards deck

 Place ESCUTCHEON (15) and RING (14) onto VALVE (10) and secure to sink/deck surface

Series	Α
64	2-1/2"
55	2"

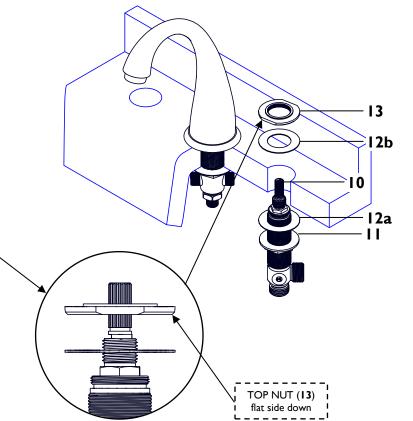

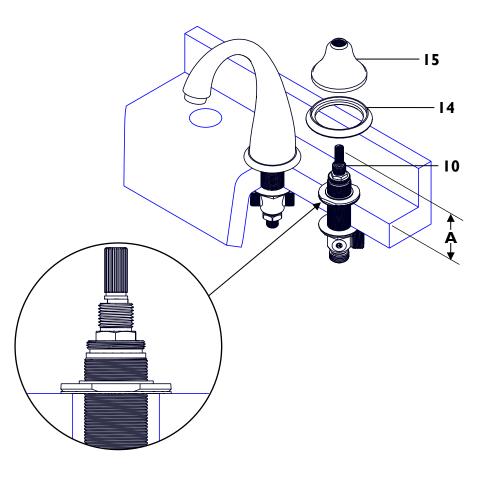

3 INSTALLING HANDLES

- Loosen SETSCREW (16b) from HANDLE (16a)
- Slide HANDLE (16) down onto and engage valve STEM (10a)
- Allow a minimum gap (1/32") between HANDLE (16) and ESCUTCHEON (15), tighten SETSCREW (16b)

IMPORTANT: To obtain proper alignment it may be necessary to rotate VALVE (10) so that HANLDE (16) is aligned to desired orientation

- Attach small hose NUT (17a) to spout TEE (6a)
- Attach large hose NUT (17b) to valve side OUTLET (10b)
- Repeat on other side valve

INSTALLING SUPPLY LINES

IMPORTANT: Prior to attachment, flush supply lines to remove debris that may cause damage or malfunction to valve cartridge.

Ø

......

The following are two types of supply lines (not included) that may be installed to the valve bodies:


Ballnose riser for exposed application

• Install BALLNOSE RISER (18a) using valve NUT (10c) to secure riser to valve INLET (10b)

-OR-

Flexible riser for non-exposed application

• Discard valve NUT (10c) & install FLEX RISER (18b) to valve INLET (10b)

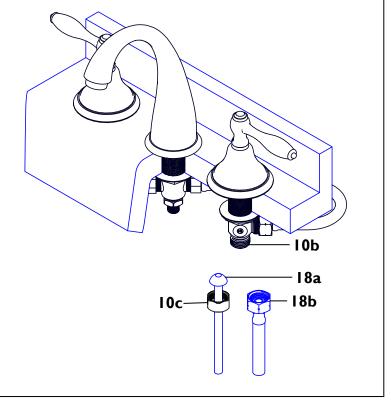

17b

6402_ii_20210422

INSTALLING DRAIN

- Remove COLLAR (19) from assembly & apply silicone caulk (or equivalent) to underside of COLLAR (19)
- Insert BODY (20) from below & attach COLLAR (19)
- Align BALL ROD HOLE (20a) to rear & secure FLANGE NUT (21), FRICTION WASHER (22) & MACK WASHER (23) to sink drain hole
- Remove TAILPIECE (24) from BODY (20), apply thread sealant to threads & tighten into BODY (20)
- Insert STOPPER (25) into COLLAR (19) and rotate off-set HOOK (25a) to front to accept BALL ROD (26)
- Remove spring CLIP (27) from BALL ROD (26)
- Place CONE WASHERS (28) on both sides of rod BALL (29) with NUT (30) to backside
- Insert BALL ROD (26) into BALL ROD HOLE (20a) and through off-set HOOK (25a)

IMPORTANT: HOOK (**25a**) must be toward front of sink as shown to achieve proper stopper height

- Tighten NUT (**30**), but allow BALL ROD (**26**) to freely move up and down
- Insert LIFT ROD (32) through hole in spout from above
- Place STRAP (31) onto LIFT ROD (32) and tighten THUMB-SCREW (33)
- Place one end of CLIP (27) onto BALL ROD (26), then STRAP (31), gently squeeze CLIP (27) and slide other end of CLIP (27) onto BALL ROD (26)
- Check proper operation of STOPPER (25) and adjust by sliding STRAP (31) on LIFT ROD (32) as necessary

Final connections

- Attach drain tailpiece to p-trap (not supplied)
- Turn on water supply valves and check for leak

